

汽修工程师
VCXCAR.COM



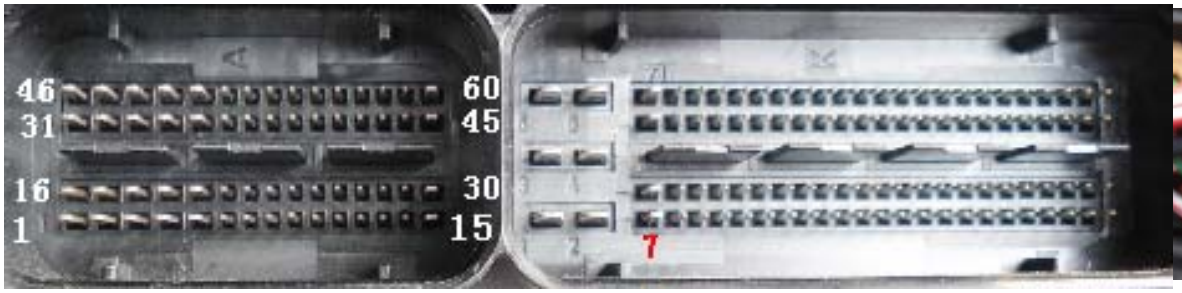

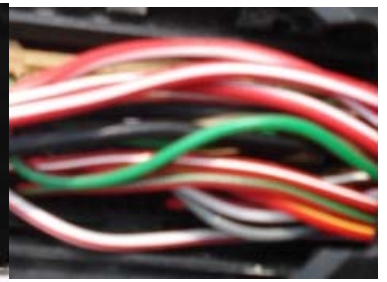

序号	颜色	线路图标注及功能说明	电阻	IG SW OFF电	IG SW ON电压	ENG RUN	波形?
A46	黑线条/灰	O_P_INJVL21,Cyl.3 (1#)	实车测试电阻值为:025～0.37Ω，通常万用表误差也会有这个值，所以测试时需注意这个问题。	0V	?	?	需
A01	黄线条/黑	O-P-INJVH21:Cyl.3 (2#)		0V	0V	?	需
A31	黑线条/灰	O_P_INJVL22,Cyl.2 (1#)	实车测试电阻值为:025～0.37Ω，通常万用表误差也会有这个值，所以测试时需注意这个问题。	0V	?	?	需
A02	黄线条/黑	O-P-INJVH22:Cyl.2 (2#)		0V	0V	?	需
A47	红线条/蓝	O_P_INJVL11,Cyl.1 (1#)	实车测试电阻值为:025～0.37Ω，通常万用表误差也会有这个值，所以测试时需注意这个问题。				
A16	黄线条/黑	O_P_INJVH11,Cyl.1 (2#)		0V	?	?	需
A33	蓝线条/红	O_P_INJVL12,Cyl.4 (1#)	实车测试电阻值为:025～0.37Ω，通常万用表误差也会有这个值，所以测试时需注意这个问题。				
A17	黄线条/黑	O_P_INJVH12,Cyl.4 (2#)		0V	?	?	需
A07	黑	G_C_CRS, Crankshaft 曲轴位置传感器信号屏蔽接地线，于电脑内部接地。					
A12	黄线条/绿	I_F_CRSPOS, Increment speed sensor Crankshaft (1#)	曲轴位置传感器静态电阻值:910±5%	0V	?	?	需
A27	白线条/棕	I_F_CRSPOS, Increment speed sensor Crankshaft (2#)					
A8	棕	G_R_RAILPS,Rail pressure sensor (1#)		需验证			
A43	白	I_A_RAILPS,Rail pressure sensor (2#)		0V			

FREE 10% PREVIEW (1/5 pages) - Full PDF & ECU files at ECUFLASH.PRO -> https://ecuflash.pro/en/file/228521-sinotruk-howo-cummins-cm-file-pdf

ECUFLASH.PRO · ENGINEERING ARCHIVE

End of Free 1-Page Preview (Total: 5 Pages)

EDC16C39 ECU Pinout & Wiring Diagram for Sinotruk Howo Cummins CM Engi

DOWNLOAD FULL 5-PAGE PDF AT ECUFLASH.PRO ->